

Easy installation

of your

eFlow tag




eFlow
you first




Installing your tag in a car

You should install your eFlow tag inside your vehicle, just behind the rear-view mirror.

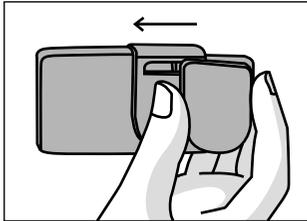


1 INSERT THE TAG

Attach the holder to the tag by sliding it into the slot of the tag, as pictured.

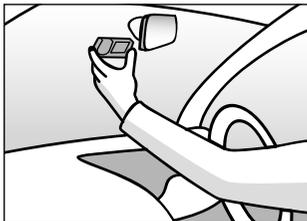


2 FIRST CHECK THE POSITION

Before you remove the adhesive protection, place the holder including the tag horizontally behind the rear view mirror, making sure that it will fit and not obstruct the driver's view.

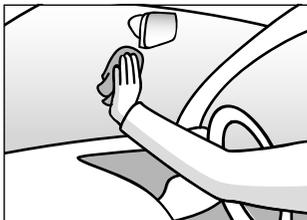


3 CLEAN YOUR WINDSCREEN

With the cleaning tissue provided, clean the windscreen where the tag will be placed. Make sure that the windscreen is dry and has a temperature of at least 15°C. If necessary, dry with a cloth.

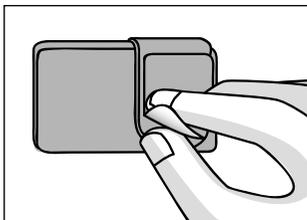

4 REMOVE ADHESIVE PROTECTION

The tag holder is now ready to attach to the windscreen.

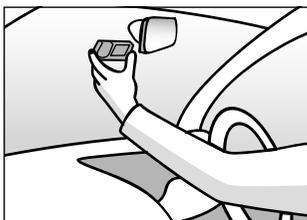

5 ATTACH THE HOLDER


Fix the tag holder (with tag attached) on the windscreen, making sure that the tag is straight. Hold firmly for at least 10 seconds. If your windscreen is UV-coated, install the holder on the black dots.

Note: Some windscreens have a metallic layer to reflect heat from the sun. In this case the tag must be placed within the designated areas of the windscreen without this coating. These are normally marked with a different colour or pattern.




Installing your tag in a bus, lorry or truck

You should install your eFlow tag inside your vehicle, at the bottom centre of the windscreen.

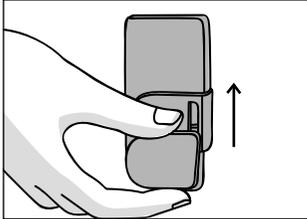


1 INSERT THE TAG

Attach the holder to the tag by sliding it into the slot of the tag, as pictured.

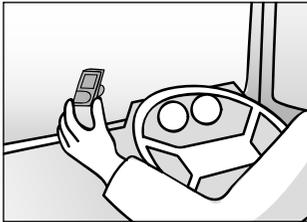


2 FIRST CHECK THE POSITION

Before you remove the adhesive protection, place the holder including the tag vertically at the bottom of the windscreen, making sure that it will fit and not obstruct the driver's view.

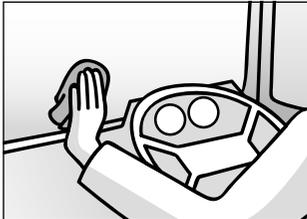


3 CLEAN YOUR WINDSCREEN

With the cleaning tissue provided, clean the windscreen where the tag will be placed. Make sure that the windscreen is dry and has a temperature of at least 15°C. If necessary, dry with a cloth.

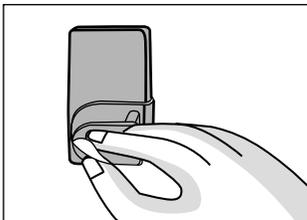

4 REMOVE ADHESIVE PROTECTION

The tag holder is now ready to attach to the windscreen.

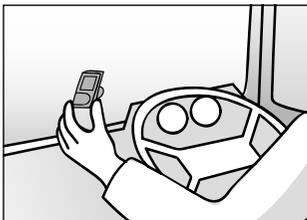

5 ATTACH THE HOLDER

Fix the tag holder (with tag attached) on the windscreen, making sure that the tag is straight. Hold firmly for at least 10 seconds.

A FEW POINTERS

For safety, it's best to install the holder or position the tag when your vehicle is not moving.

To ensure it can be read by all tolling detectors you must keep your tag installed permanently.

Your tag cannot be used on multiple vehicles. So please ensure the serial number on the tag matches the licence plate of the vehicle it's attached to. This is especially important if you have registered for more than one tag on your account.

Please be aware that your tag will work immediately on the M50 toll road, however it can take up to four working days from the issue date on the letter you received with your tag, to become active on all other toll roads around Ireland.



Your eFlow tag works on every toll road in Ireland

- M50
- Dublin Port Tunnel
- East Link Bridge
- M4 Kilcock-Enfield-Kinnegad Motorway
- M1 Motorway (Gormanston to Monasterboice)
- M3 Clonee to Kells
- N25 Waterford
- M7/M8 Portlaoise
- N6 Galway-Ballinasloe
- Limerick Tunnel
- N8 Rathcormac/Fermoy Bypass



Lo-call: 1890 50 10 50
Intl: +353 1 461 0122

www.eflow.ie
www.eflowrewards.ie

 [@eflow_freeflow](https://twitter.com/eflow_freeflow)

eflow
you first